-PRE-AMP C1 --

FRONT PANEL VIEW

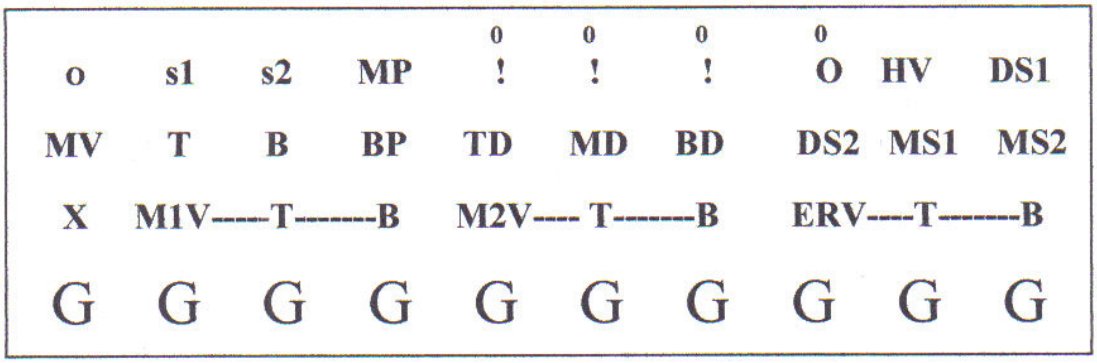

G = GRAPHIC EQUALISER
X = DECK CROSSFADE
M1V = MIKE 1 VOLUME
M2V = MIKE 2 VOLUME
ERV = ECHO RETURN VOLUME
MV = MAIN VOLUME
BP = BASS PARAMETRIC
MP= MID PARAMETRIC
TD = TREB DRIVE
MD = MID DRIVE
BD = BASS DRIVE
DS1 = DECK ECHO SEND
MS1 / MS2 = MIKE ECHO SENDS
DS2 = ECHO SEND ALL
S1=HEADPHONE MONITOR SELECT
S2 = PLAY DECK (DOWN) OR LINE (UP)
HV = HEADPHONE VOLUME

REAR PANEL VIEW

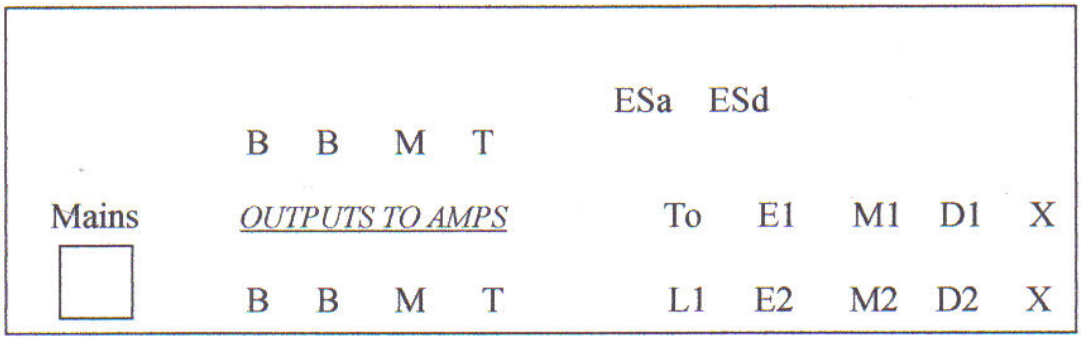

B= BASS OUTPUTS
M= MIDRANGE OUTPUTS
T= TREBLE OUTPUTS
M1-M2=MIKE INPUTS
D1 - D2= DECK INPUTS
ESd= ECHO SEND - DECKS ONLY
ESa= ECHO SEND - DECKS + MIKES
L= LINE / AUX INPUT
E1 - E2= ECHO RETURN (INPUT)
To= TAPE OUTPUT
X = NOT USED ON THIS MODEL